

**SERIES:**

MITRA, ARUNA, CERES, GAIA, ILLONA, NORA, SENNA, THERMA


**HT25 RF/HT25S RF/HT26S RF USER MANUAL**

**GENERAL SPECIFICATIONS**

HT25 RF/HT25S RF/HT26S RF is a wireless room thermostat. The user can adjust the room temperature with the required temperature and get more comfortable and economic heating/cooling.

- Precise Temperature Measurement
- Heating calibration
- Heating/Cooling Modes
- Open Window Detection Feature
- ON/OFF Control
- Wireless Connection
- TPI Algorithm

**HT25 RF/HT25S RF/HT26S RF ve APARATLARI**

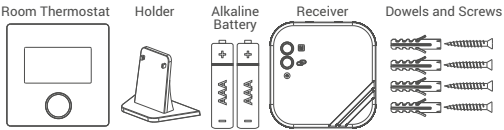


**TECHNICAL DATA**

Room Thermostat	
Dimensions	85.7mm / 85.7mm / 33.5mm
Operating Current	3V DC (2 x AAA alkaline battery)
Temperature Measurement Accuracy	0.1°C
Operating Temperature Range	(5°C) – (30°C)
Battery Life	1 Years (2 x AAA)
Operating Temperature	(-10°C) – (+50°C)
Storage Temperature	(-20°C) – (+60°C)


Receiver	
Dimensions	90mm / 90mm / 25mm
Operation Current	230V AC
Relay NO Switching Current	7A (240VAC – Resistive load) 10A (120VAC – Resistive load)
Storage Temperature	(-20°C) – (+60°C)

**ROOM THERMOSTAT**

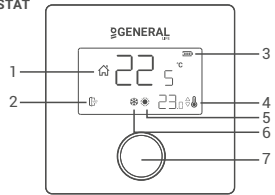

1	Room Temperature
2	Open Window Detection Feature
3	Battery Indicator
4	Set Temperature
5	Heating Indicator - If the Heating Indicator is blinking, the heating unit is working. - If the Heating Indicator is steady, the heating unit is not working.
6	Cooling Indicator - If the Cooling Indicator is blinking, the cooling unit is working. - If the Cooling Indicator is steady, the cooling unit is not working.
7	ON/OFF and Temperature Setting Button

**RECEIVER**

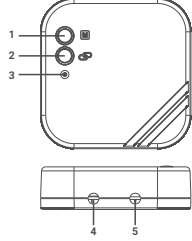


- 1-Manual Operation Button:** Deactivates the Receiver and allows you to use heating/cooling unit manually.
- 2-Pairing Button:** Pairs the Receiver and the Room Thermostat.
- 3-Receiver LED Light**
- 4-Receiver Power Cable Input**
- 5-Heating/Cooling Unit Connection Cable Input**

**RECEIVER LED DESCRIPTIONS**


Constant Red	Receiver has power but Receiver and Room Thermostat are not paired.
Blinking Green	Waiting for pairing signal from the Room Thermostat.
Constant Green	Receiver and Room Thermostat are paired. Heating/cooling unit is not operating.
3 Short Orange Blinking	Operate the heating/cooling unit signal has reached to the Receiver.
Constant Orange	Heating/cooling unit is operating.
3 Short Green Blinking	Shut the heating/cooling unit down signal has reached to the Receiver.
Blinking Orange	Heating/Cooling unit operates in manual mode.
Blinking Red	Receiver did not get any signal from the Room Thermostat for 22 minutes or longer. Heating/cooling unit has shut down.

**ROOM THERMOSTAT PLACEMENT**

Room Thermostat needs to be placed in the room which is used most frequently. For instance; living room or lounge. Placing the Room Thermostat in a spot that have air circulation like entrance of a room or side of window should be avoided. Also anywhere close to heating/cooling units such as radiator, stove and spots which get direct sun lights would not be suitable. Room Thermostat needs to be located above the floor 150 cm height. Few trials may be made to find the most convenient spot.

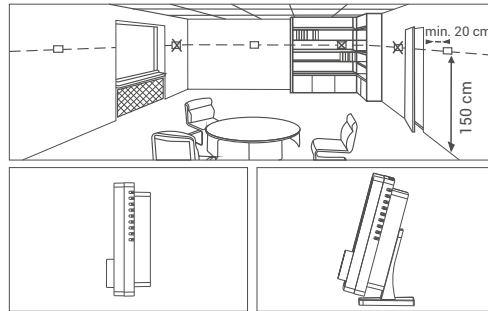

**BATTERY PLACEMENT**

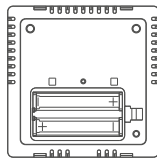


Remove the battery cover located on the back of your Room Thermostat. Insert 2 new AAA alkaline batteries into the battery housing with the correct battery direction and close the battery cover. Replace both batteries at the same time.

**Low Battery Warning:** When the "Lb" icon appears on the screen, it means "low battery warning". It is recommended to replace the batteries when this warning appears.

**Warning:** When the product is not used for a long period (more than 15 days), remove the batteries. Otherwise, malfunctions that may occur would be out of warranty. Please throw your dead batteries into the waste bin for batteries.

**RECEIVER PLACEMENT**

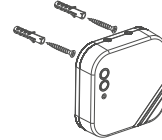

The important things to note for the Receiver placement is avoiding physical contact between the Receiver and heating/cooling unit, and protecting it against materials such as liquid, dust etc.


The devices should be placed in order to minimize the damage to the received and transmitted signals by paying attention to the following points;

- The devices should not be mounted on metal surfaces.
- The devices should not be installed close to electrical cables and electronic equipment such as computers and television units.
- The devices should not be installed near large metal structures or other building materials using fine metal meshes such as special glass or special concrete.
- Distance between the Room Thermostat and the Receiver should not exceed 20 meters or 2 floors.
- Receiver must be installed at least 50 cm away from the heating/cooling unit.

**RECEIVER SETUP**

- First, shut down your heating/cooling unit and your heating/cooling unit's power source with all electrical current (fuse, socket etc.)
- As shown in the connection diagram, connect one end of the heating/cooling unit connection cable to the COM and the other to the NO input of the Receiver.
- Connect the other ends of the cable -which you connected to the Receiver to room thermostat connection terminal as shown in your heating/cooling unit's user manual.
- You must first connect the Receiver power cable to the Receiver and then to the fuse to which the heating/cooling unit is connected.
- After completing the cable connection process, firstly turn on your fuse and then your heating/cooling unit.
- By pressing the Receiver's manual usage button for 2 seconds, you should see the Orange Light blinking on the Receiver. In this way, after making sure that the heating/cooling unit is operating, press the same button again for 2 seconds and see that the Orange LED turns off.
- Set up the Room Thermostat to pair the Receiver with the Room Thermostat.

**RECEIVER WIRING DIAGRAM**

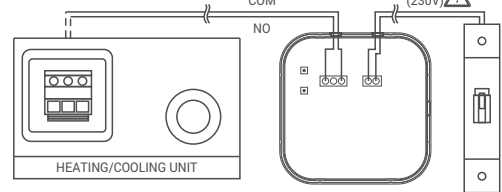

**Warning!**

Operations within the heating / cooling unit or the electrical installation must be carried out by professionally qualified persons.

**PAIRING THE ROOM THERMOSTAT AND THE RECEIVER**

- Primarily press the sync button of receiver for 2 seconds and see blinking green light of receiver.
- While your device is turned off, press and hold the button for 3 seconds.
- Press the button until the "Fd." menu appears.
- Then turn up the button to right or left way.
- If the pairing is successful, the green flashing LED on the receiver will be constant.
- Receiver and Room Thermostat have been paired to each other.

**ROOM THERMOSTAT TEMPERATURE CALIBRATION**

Temperature sensors which are used in Room Thermostats are highly sensitive. You may need to calibrate your Room Thermostat if you would like to get the same temperature values with other thermometers in your living space.

- While your device is turned off, press and hold the button for 3 seconds.
- Press the button until the "Fl." menu appears. In order to see the desired temperature, set the temperature difference by turning the button to right or left. This value can be arranged between "-8°C" and "+8°C".
- To save the settings and exit, press the "On/Off" button until the device turns off.

**Note:** Recommended temperature calibration is "0.0°C".

**ROOM THERMOSTAT HEATING / COOLING MODES**

Your Room Thermostat has heating and cooling modes. In order to switch easily between heating and cooling modes:

- While your device is turned off, press and hold the button for 3 seconds.
- Press the button until the "Flu." menu appears.
- You can switch between "He." (heating) and "Cl." (cooling) modes by turning the button to right or left in the "Flu." menu.
- To save the settings and exit, press the button until the device turns off.
- The settings you have made have been saved. Once you turned on your device, it will operate with the changed settings.

**OPEN WINDOW DETECTION FEATURE**

If a window is left open, cold air will enter and the temperature in the room will drop rapidly. In cooling systems, hot air will enter and the temperature in the room will rise rapidly. The Room Thermostat, which detects this situation, tries to keep the room temperature at the desired level by operating the heating or cooling system more. The open window detection feature allows the Room Thermostat to operate the heating/cooling system more efficiently in case the temperature in the room drops or rises rapidly.

This feature is used to save energy and to ensure more efficient operation of heating and cooling systems. Thanks to the open window detection feature, unnecessary energy expenditure is prevented and allows the user to save energy costs.

When the Room Thermostat is in heating mode and the Open window detection feature is active, if it detects a sudden drop in room temperature up to the degree adjusted in the Set menu (factory setting 5°C) within 15 minutes, it switches to alarm status, the open window icon flashes on the display of the Room Thermostat and switches off the heating/cooling unit. The heating/cooling unit remains off for the time adjusted in the Run Menu. If the Room Thermostat detects that the window is closed or if a manual intervention is made on the Room Thermostat, the detection is deactivated and heating/cooling unit continues to operate from where it left off. If a sudden drop in ambient temperature is detected again, the Room Thermostat goes into alarm status.


If the Room Thermostat is operated in cooling mode, the sudden temperature rise in taken to consideration.

This feature is active in factory setting.

It can be deactivated from the Room Thermostat settings.

To deactivate the open window detection feature:

- Press the "ON/OFF" button for 3 seconds while your device is turned off.
- Press the "ON/OFF" button until the "Op." menu appears.
- While in the "Op." menu, turn the button to left. The "nD" option will appear.
- To save the settings and exit, press the "ON/OFF" button until the device turns off.
- The settings you have made are saved. Your device will work with the setting you have made when you open it.

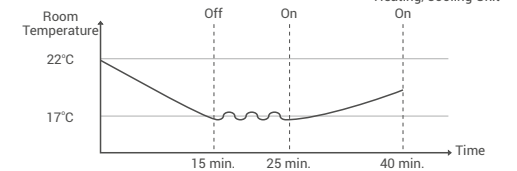

**OPEN WINDOW DETECTION OPERATION SETTINGS**

**-SET MENU**

Set Menu allows you to set the value of the sudden temperature change (celsius) required for your Room Thermostat to activate the open window detection feature. The factory setting of the required sudden temperature change value is 5°C. This value can be adjusted between 2°C and 10°C.

To change the open window operating temperature:

- Press and hold the button for 3 seconds while the device is switched off.
- Press the button until the "Se." menu appears.
- In the "Se." menu that appears, adjust the operating temperature by turning the button to the right or left.
- To save the settings and exit, press the button until the device switches off.
- The settings you have made have been saved. Once you turn on your device, it will operate with the changed settings.

**-RUN MENU**

Run Menu allows you to set the off time of the heating/cooling unit while the open window detection feature of your Room Thermostat is active. The factory setting for off time is 10 minutes.

To set the off time:

- Press and hold the button for 3 seconds while your device is switched off.
- Press the button until the "Flu." menu appears.
- Set the operating time of the open window detection feature by turning the button to the right or left in the "Flu." menu.
- To save the settings and exit, press the button until the device switches off.
- The settings you have made have been saved. Once you turn on your device, it will operate with the changed settings.

### FACTORY SETTINGS RESET

You can reset your Room Thermostat to its default factory settings. This operation resets the calibration setting, heating/cooling modes and hysteresis settings to factory setting. To reset your Room Thermostat to factory setting:

- While your device is turned off, press and hold the button for 3 seconds.
- Press the button until the "r-5 t" menu appears.
- While in the "r-5 t" menu, turn the button to right or left in order to select " 95 " option and press the button.
- Your device will be turned off and reset to factory settings.

### TPI ROOM THERMOSTAT WORKING LOGIC


Your Room Thermostat works with the TPI algorithm. Room Thermostats using TPI technology predict when the temperature of your home will rise above or below the set temperature and turn the heating / cooling unit on and off accordingly. This ensures that your home stays at the temperature you set without maximum deviations up and down.

- What is TPI?  
TPI technology is designed to ensure that you get the best possible energy efficiency from your heating / cooling system. It measures and applies the best possible timings to deliver and maintain your home at the set temperature level.
- How does TPI work?  
Thanks to the advanced artificial intelligence technology found in the software, it adapts to the temperature change of the environment in which it is located. By creating a general temperature map of your home, it learns how long it takes to reach the desired room temperature and how to maintain this temperature. In this way, it provides minimum energy consumption by calculating how long your heating / cooling unit should work for.
- What is the difference?  
In non-TPI room thermostats, the heating / cooling unit works and stops continuously until it exceeds the set temperature value. If the set temperature drops below a certain amount, the heating / cooling unit will work again. This creates greater temperature fluctuations and less energy control. TPI Room Thermostats, on the other hand, provide higher savings and comfort compared to On/Off room thermostats with the advantages it has.


**Heating Mode**  
Your room thermostat takes the average room temperature of last 40 seconds as basis. With the TPI algorithm in the product by creating a general temperature map of your home, it learns how long it takes to reach the desired room temperature and how this temperature is maintained. Thus, it ensures that the room temperature remains within a certain range.

**Cooling Mode**  
Your room thermostat takes the average room temperature of last 40 seconds as basis. With the TPI algorithm in the product by creating a general temperature map of your home, it learns how long it takes to reach the desired room temperature and how this temperature is maintained. Thus, it ensures that the room temperature remains within a certain range.

**TPI ROOM THERMOSTAT HEATING MODE WORKING GRAPHIC**  
TEMPERATURE (°C) - - - Desired Temperature — TPI Room Thermostat

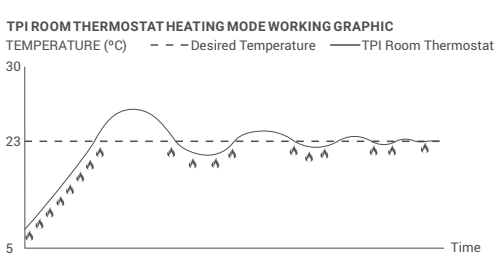

**TPI ROOM THERMOSTAT COOLING MODE WORKING GRAPHIC**  
TEMPERATURE (°C) - - - Desired Temperature — TPI Room Thermostat

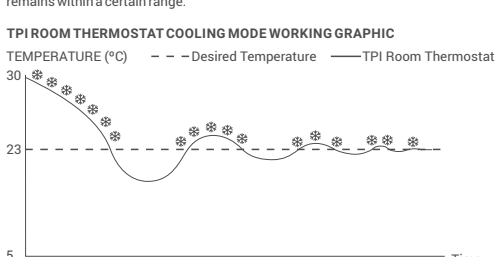

Your Room Thermostat sends the last status signal to the Receiver every 6 minutes. Thus, your Room Thermostat and Receiver work synchronously. If the signal cannot reach to the Receiver from the Room Thermostat for 22 minutes, it perceives that the connection is broken and stops the heating/cooling operation for safety reasons. Likewise, in cases where the electricity comes back after a power failure, the Receiver do not operate the heating/cooling unit until 'operate' signal reaches from the Room Thermostat.

However, in this case, if the Room Thermostat continues to operate normally, it will continue to work properly without any need for intervention since it sends a status signal to the Receiver every 10 minutes.

### WHAT TO KNOW ABOUT TPI ROOM THERMOSTAT

- If the placement of the TPI Room Thermostats is changed, the learning process will restart. The learning process should be considered as 7 days.
- If the TPI Room Thermostats are de-energized (battery replacement), the learning process will restart. The learning process should be considered as 7 days.

### FREQUENTLY ASKED QUESTIONS

- Is my Room Thermostat compatible with my heating/cooling unit?  
If your heating / cooling unit has on-off connections, your Room Thermostat is compatible. You can find information about your heating / cooling unit from your heating / cooling unit operating manual or from your heating / cooling unit service.
- How will I connect my heating/cooling unit with my Receiver?  
We recommend that the connection between the Receiver and heating/cooling unit should be made by professionally qualified persons.
- 2x0.75 mm cable is sufficient for the Receiver – heating/cooling unit connection. Connect one end of the cable pair to the room thermostat connection terminals stated in the user manual of your heating/cooling unit.
- Connect the other end of the cable pair to COM and NO inputs of the terminal inside the Receiver as shown in the "RECEIVER WIRING DIAGRAM" section. The direction of the cable ends does not matter.

### DECLARATION OF CONFORMITY

ISIPARK İÇ VE DIŞ TIC. İNŞ. İSITMA SİSTEMLERİ ÖTÖ. SAN. A.Ş. which Head Office and production site is located on Fatih Mah. 1188 Sk.No:13/A Sarıç - Gazimeir - İZMİR – TÜRKİYE confirms and declares that the product marked with CE and its specifications below is covered by the provisions of the mentioned directive.

Brand : GENERAL Life  
Product Name : HT25 RF/HT25S RF/HT26S RF  
Product Type : Digital Room Thermostat  
Compatible Directives:  
Radio and Telecommunications Terminal Equipment Regulation  
2014/53/EU (ETSI EN 301 489-1 V2.2.3 (2019-11),  
ETSI EN 301 489-1 V3.2.4 (2020-09), EN 300 220-1 V3.1.1,  
EN 300 220-2 V3.2.1 (2018-06), EN 62479: 2010,  
EN 62368-1:2014+A11:2017)  
Electromagnetic Compatibility Regulation 2014/30/EU  
(ETSI EN 301 489-1 V2.2.3, ETSI EN 301 489-3 V2.1.1)  
Low Voltage Directive 2014/35/EU (EN 60730-2-9)

Additional Information: The mentioned product can be used with heating/cooling units with on / off output and compliance with the directives only covers the product. ISIPARK is not responsible for the entire system's compliance with the directives. This statement is not valid if changes are made to the product without our approval.



### WARRANTY CONDITIONS

1-The warranty period starts from the invoice date and warranted against manufacturing defects for 2 years.

2-Devices and apparatus are delivered to the customer in working condition in our company. On-site commissioning is subject to a service fee.

3-The repair of the devices and apparatus covered by the warranty is carried out in our company factory and should send by contracted transportation company. In on-site services, the transportation and accommodation expenses of the service personnel belong to the customer. The shift fee during transportation is added to the service fee and collected in advance.

4-The maintenance of devices and apparatus is done in our company. For the maintenance of the devices and apparatus, the round travel fares belongs to the customer.

5-In case of malfunctioning of the devices and apparatus whose warranty period continues, it is tested in our company whether the malfunction is caused by a customer or manufacturer fault, and it is reported with a report issued by our company.

6-In case of detection of manufacturer-induced errors of devices and apparatus whose warranty period continues, the customer can request a replacement or repair of the devices and apparatus at full expense by the manufacturer, unless it's higher than the product's price.

7-In the event that the faults of the devices and apparatus whose warranty period continues are determined as caused by the customer, all expenses would be belong to the customer.

8-Customers should be aware of damages (if there is any) of product and warn manufacturer since the day warranty duration starts. If customer do not warn manufacturer with knowledge of damage, customer lose the rights of article 6.

9-Malfunctions resulting from the use of devices and apparatus contrary to the matters stated in the User Manual are not covered by the warranty.

10-Devices and their apparatus are out of warranty if they are beaten, broken or scratched by the customer.

11-Damages resulting from the use of devices and apparatus belonging to other brands and models without the approval of the manufacturer are not covered by the warranty.

12-Battery leakage and errors due to rust, oxidation and liquid contact by working in acidic / humid environments are not covered by the warranty.

13-When the product is not used for a long period (more than 15 days), remove the batteries. Otherwise, malfunctions that will occur are out of warranty.

14-Damages that may occur during the transportation of devices and apparatus are not covered by the warranty. Customers can take a transportation insurance.

15-Damages caused by mains voltage / faulty electrical installation are not covered by the warranty.

16-Devices and apparatuses are out of warranty for malfunctions caused by force majeure such as fire, flood, earthquake etc.

17-All of the devices and apparatuses, including all their parts, are under the warranty of our company.

18-In case of malfunction of the devices and apparatuses within the warranty period, the time spent during repairment period is added to the warranty period. The repair period of the product cannot exceed 20 working days. This period starts from the date of notification to the service station of the malfunction related to the product or, in the absence of a service station, to the seller, dealer, agency, representative, importer or manufacturer of the product. Consumer can report the problem by; phone, fax, e-mail, registered and reply paid letter or a similar way. However, in case of a conflict, responsibility of prove is belong to the customer. If the malfunction of the product is not repaired within 20 working days, the manufacturer-producer or importer; has to allocate another product with similar features to the use of the consumer until the repair of the product is completed.

19-Although the consumer uses his/her repair rights,  
-If the product breaks down for 4 times in a year or 6 times in warranty duration and these problems effects main purpose of the product. (starting from delivery time during warranty)

-Exceeding the maximum time required for repair,  
-In the event that the service station is not available, if it is determined that the repair of the defect is not possible with the report prepared (in order) by one of the seller, dealer, agency, representative, importer or manufacturer, a refund or a price discount at the rate of defect can be requested.

20-The customer can make complaints and appeals to consumer courts or consumer arbitration committees.

21-The warranty document must be kept by the customer during the warranty period. If the document is lost, a second document will not be issued. In case of loss, repair and replacement of devices and apparatus will be made for a fee.

### WARRANTY CERTIFICATE

**Manufacturer**  
Title: ISIPARK İÇ DIŞ TIC. A.Ş.  
Address: Fatih Mah. 1188 Sk. No:13/A Sarıç  
Gazimeir İzmir-TÜRKİYE  
Tel: +90 (232) 457 99 50  
Fax: +90 (232) 457 91 22  
E-mail: generalife@generallife.com.tr  
Authorized Signature:  
Company Stamp:

**Product**  
Type: Digital Room Thermostat  
Brand: GENERAL Life  
Model: HT25 RF/HT25S RF/HT26S RF  
Warranty Period: 2 Years  
Max. Time to Repair: 20 Days  
Bandrol and Serial Number:



**Vendor**  
Title:.....  
Address:.....  
Tel:.....  
Fax:.....  
E-Mail:.....  
Invoice Date and Number:.....  
Delivery Time and Place:.....  
Authorized Signature:.....  
Company Stamp:.....

**Product**  
Type: Digital Room Thermostat  
Brand: GENERAL Life  
Model: HT25 RF/HT25S RF/HT26S RF

STAMP

ISIPARK reserves the rights of changing product specifications and user manuals.

\* For all changes, you may visit generalife.com.tr