

HT330S SMART USER MANUAL

WHAT IS A SMART ROOM THERMOSTAT?

A smart room thermostat is a device that allows you to control your heating equipment via APP with the internet even when you are not at home.

HOW DOES HT330S SMART WORK?

HT330S SMART is a smart wireless room thermostat. You can control it with the mobile application after you pair your room thermostat with the receiver, and complete the installation of the smart receiver.


WHAT ARE THE ADVANTAGES OF HT330S SMART?

- You can control your home's temperature via its mobile application, no matter where you are in the world.
- You can easily create daily and weekly schedules via its mobile application.
- You can place the room thermostat anywhere in your home, thanks to its use with batteries.
- It ensures that your living space stays at the desired temperature at any time. In this way, you can save up to 30% on your bills by preventing your heating unit from working unnecessarily.

RULES THAT NEED TO BE OBSERVED FOR SAFETY

- Be sure to read the user manual before using the device and its equipment.
- Opening, disassembly, or use of plastic parts of the product and equipment other than the intended purpose are out of warranty.
- Please make sure that the sockets to which you connect your devices and equipment are at the recommended voltage value in the user manual.
- Keep away and protect your product and its equipment from all kinds of external substances such as liquid, dust, heat, etc.
- Do not expose the device cables to any jamming and pressure. Take care to connect the devices' energy connection to the sockets you can always reach.
- Turn off the electrical power to prevent damage to your device and apparatus in case of lightning and thunderstorms.
- Turn off the electrical power when your device is not used for a long time.
- Your devices and equipment should be used by paying attention to the matters stated in the user manual. In case of damage and malfunctions, arising from improper use (contact with liquid, falling to the ground, etc.) definitely ask for the installer's help.
- Call our service for maintenance and repair of HT330S SMART and its equipment. Maintenance and repair of the device and equipment should be carried out only by the technical service of ISIPARK A.Ş. and its authorized services, spare parts, and accessories specified by the company should be used.


HT330S SMART and EQUIPMENT



TECHNICAL DATA


Room Thermostat	
Dimensions (H/L/W)	85mm / 125mm / 20mm
Operating Current	3V DC (2 x AAA Alkaline Battery)
Temperature Measurement Accuracy	0.1°C
Operating Sensitivity	(-2.0°C) - (+2.0°C)
Operating Temperature Range	(5°C) - (40°C)
Battery Life	1 Year (2 x AAA)
Operating Temperature	(-10°C) - (+50°C)
Storage Temperature	(-20°C) - (+60°C)
Receiver	
Dimensions (H/L/W)	90mm / 90mm / 25mm
Operating Current	230V AC
Relay NO Switching Current	7A (240VAC - Resistive Load) 10A (120VAC - Resistive Load)
Storage Temperature	(-20°C) - (+60°C)

ROOM THERMOSTAT

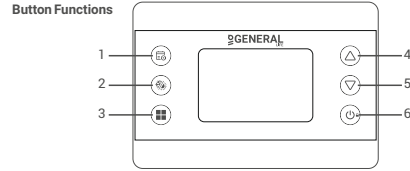

1	Weekly Program Button
2	Heating & Cooling Option
3	Mode Button
4	Temperature Adjustment Button (To Increase)
5	Temperature Adjustment Button (To Decrease)
6	On/Off Button - Unlock Button


Product Display Layout

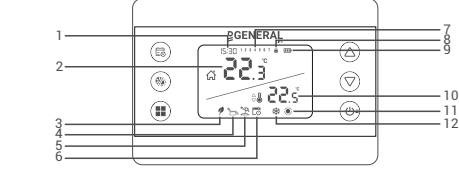

1	Hour Indicator
2	Room Indicator
3	Economy Mode
4	Comfort Mode
5	Holiday Mode
6	Weekly Program Mode
7	Day Indicator
8	Screen Lock
9	Battery Indicator
	Set Temperature
10	Heating Indicator
	- If the Heating Indicator is blinking, the heating unit is not working.
	- If the Heating Indicator is steady, the heating unit is not working.
11	Cooling Indicator
	- If the Cooling Indicator is blinking, the cooling unit is working.
	- If the Cooling Indicator is steady, the cooling unit is not working.

Note: During active use of the room thermostat, the symbols indicated by 3, 4, 5, 6, 10, 11 and 12 will not appear on the screen.

RECEIVER

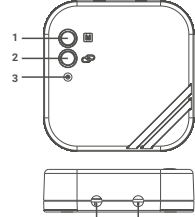

- Manual Operation Button:** Deactivates the receiver and allows users to manually use the heating/cooling unit.
- Wi-Fi Pairing Button:** Makes the receiver ready for smart installation.
- Receiver LED Light**
- Receiver Power Cable Input**
- Heating/Cooling Unit Connection Cable Input**


RECEIVER LED DESCRIPTIONS

Blinking Red	The receiver did not get any signal from the heating/cooling unit for 22 minutes or longer and the heating/cooling unit has shut down.
Fast Blinking Red	Waiting for a pairing signal from the room thermostat.
Steady Red	The receiver and the room thermostat have been paired. Smart installation has not been completed.
Blinking Green	The receiver is in Bluetooth searching mode.
Steady Green	Smart installation has been completed. The heating/cooling unit is not working.
Steady Turquoise	The heating/cooling unit is working.
3 Short Red Blinking	Shut the heating/cooling unit down signal has reached the receiver.
3 Short Green Blinking	Operate the heating/cooling unit signal has reached the receiver.
Blinking Red and Green	The heating/cooling unit is working in manual mode.

ROOM THERMOSTAT PLACEMENT

The room thermostat needs to be placed in the room which is used most frequently. For instance; the living room or lounge. Placing the room thermostat in a spot that has air circulation like the entrance of a room or the side of the window should be avoided. Also anywhere close to heating/cooling units such as a radiator, stove, and spots that get direct sun lights would not be suitable. The room thermostat needs to be located above the floor 150 cm in height. Few trials may be made to find the most convenient spot.

BATTERY PLACEMENT

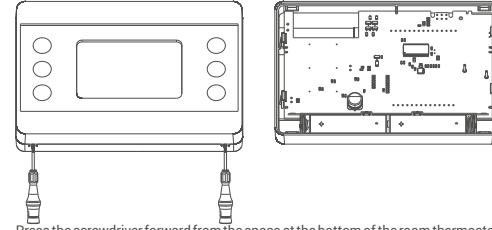

Press the screwdriver forward from the space at the bottom of the room thermostat, bend the tabs and separate the front cover. Insert 2 new AAA alkaline batteries in the battery housing with the correct battery direction. Replace both batteries at the same time. Align the front part of your room thermostat with the corresponding slot on the back, and then push gently until the thermostat snaps into place.

Low Battery Warning: When the "Lb" icon appears on the screen, it means "low battery warning". It is recommended to replace the batteries when this warning appears.

Warning: When the product is not used for a long period (more than 15 days), remove the batteries. Otherwise, malfunctions that may occur would be out of warranty. Please throw your dead batteries into the waste bin for batteries.

RECEIVER PLACEMENT

The important things to note for the Receiver placement are avoiding physical contact between the receiver and the heating/cooling unit, and protecting it against materials such as liquid, dust, etc.


The devices should be placed to minimize the damage to the received and transmitted signals by paying attention to the following points;

- The devices should not be mounted on metal surfaces.
- The devices should not be installed close to electrical cables and electronic equipment such as computers and television units.
- The devices should not be installed near large metal structures or other building materials using fine metal meshes such as special glass or special concrete.
- Distance between the room thermostat and the Receiver should not exceed 20 meters or 2 floors.
- The receiver must be installed at least 50 cm away from the heating/cooling unit.

RECEIVER INSTALLATION

- First, shut down your heating/cooling unit and your heating/cooling unit's power source with all electrical current (fuse, socket, etc.)
- As shown in the connection diagram, connect one end of the heating/cooling unit connection cable to the COM and the other to the NO input of the receiver.
- Connect the other ends of the cable -which you connected to the receiver- to the room thermostat connection terminal as shown in your heating/cooling unit's user manual.
- You must first connect the receiver power cable to the receiver and then to the fuse to which the heating/cooling unit is connected.
- After completing the cable connection process, first, turn on your fuse and then your heating/cooling unit.
- Finish the installation of the room thermostat to pair the receiver with the room thermostat.

RECEIVER WIRING DIAGRAM

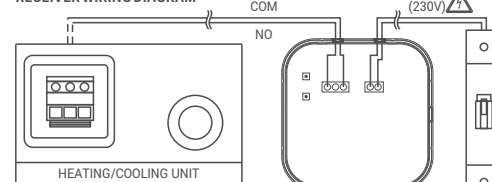

Warning! Operations within the heating/cooling unit or the electrical installation must be carried out by professionally qualified persons.

PAIRING THE ROOM THERMOSTAT WITH THE RECEIVER

- To pair the room thermostat with the receiver, press the "Manual Operation Button" and "Wi-Fi Pairing Button" together at the same time and see the receiver's fast blinking red LED.
- Press the "ON/OFF" button for 3 seconds while your device is turned off.
- Press the "ON/OFF" button until "Pd." the pairing menu appears.
- Press your room thermostat's "Up" or "Down" button while the LED is fast blinking red.
- If the pairing is successful, the fast red flashing LED on the receiver will be steady.
- The receiver and room thermostat have been paired with each other.

SMART RECEIVER SETUP

For smart receiver setup, download the Smart Life application from App Store or Google Play or scan the QR code below with your smartphone. In this way, you will be able to download the Smart Life mobile application from App Store or Google Play to your smartphone. (You may be required to have a QR code reader application depending on the brand and model of your phone, for this process.)



Click to download.

- Complete the user registration process by opening the mobile application that you downloaded.
- Open the Bluetooth from your mobile phone's settings.
- After you completed the user registration process, press the "+" button in the top-right corner of the main screen of the application, Press the receiver's Wi-Fi pairing button for 5 seconds.
- The LED on the receiver will start to blink green.
- Setup will begin with Bluetooth in the application. When the device is found, press the "Add" button.
- Uygulamada bluetooth ile kurulum başlayacaktır. Cihaz bulununca "Add" butonuna basınız.
- Press the "+" button near the W Modem device and press the "Next" button after making sure that you entered the correct Wi-Fi information.
- Wait until the setup process is completed. When you saw the green approval symbol on the W Modem, press the "Done" button in the top-right corner.

ROOM THERMOSTAT TEMPERATURE CALIBRATION

Temperature sensors which are used in room thermostats are highly sensitive. You may need to calibrate your room thermostat if you would like to get the same temperature values as other thermometers in your living space.

- While your device is turned off, press the "ON/OFF" button for 3 seconds.
- Press the "ON/OFF" button until the "CR" menu appears. To see the desired temperature, set the temperature difference by pressing the "Temperature Adjustment Buttons". This value can be arranged between "-8°C" and "+8°C".
- To save the settings and exit, press the "ON/OFF" button until the device turns off.

Note: Recommended temperature calibration is "0.0°C".

ROOM THERMOSTAT HYSTERESIS POSITIVE MENU

The hysteresis positive factory setting of your room thermostat is 0.5°C. This value may be adjusted between "0.1°C" and "2.0°C". While the hysteresis positive value is 0.5°C, if the room temperature goes above 0.5°C of the set temperature, your room thermostat will send a signal to your heating/cooling unit. For instance, when you set your room thermostat to 22.0°C, if the room temperature goes above 22.5°C, on the heating mode your heating unit will stop working; on the cooling mode your cooling unit will start working. To change the hysteresis positive setting:

- While your device is turned off, press and hold the "ON/OFF" button for 3 seconds.
- Press the "ON/OFF" button until the "H5 P" menu appears.
- Adjust the operating sensitivity by using the "Up" and "Down" buttons in the "H5 P" hysteresis positive menu.
- To save the settings and exit, press the "ON/OFF" button until the device turns off.
- Changes have been saved. Your room thermostat will be working with set operating sensitivity when you open your device.

ROOM THERMOSTAT HYSTERESIS NEGATIVE MENU

The hysteresis negative factory setting of your room thermostat is -0.5°C. This value may be adjusted between "-0.1°C" and "-2.0°C". While the hysteresis negative value is -0.5°C, if the room temperature goes below 0.5°C of the set temperature, your room thermostat will send a signal to your heating/cooling unit. For instance, when you set your room thermostat to 22°C, if the room temperature goes below 21.5°C, on the heating mode your heating unit will start working; on the cooling mode your cooling unit will stop working. To change the hysteresis negative setting:

- While your device is turned off, press and hold the "ON/OFF" button for 3 seconds.
- Press the "ON/OFF" button until the "H5 n" menu appears.
- Adjust the operating sensitivity by using the "Up" and "Down" buttons in the "H5 n" hysteresis negative menu.
- To save the settings and exit, press the "ON/OFF" button until the device turns off.
- Changes have been saved. Your room thermostat will be working with set operating sensitivity when you open your device.

